


## Door Locks


### ■ Locking the vehicle from inside

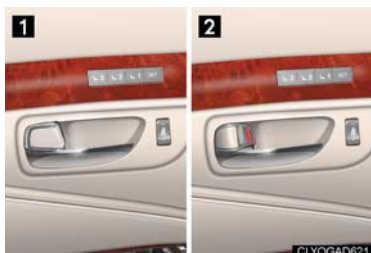

#### ► Inside lock button

1 Locks

2 Unlocks

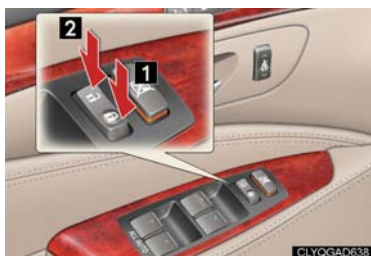

#### ► Door lock switch

Operates all door locks.

1 Locks

2 Unlocks

### ■ Locking the vehicle from outside

Using the entry function or wireless remote control (→P.9, 10)

### ■ Rear door child-protector lock



Setting the switch to the LOCK position prevents the rear doors from being opened from the inside.

Always set the child protector locks when children are seated in the rear seat.

### ■ Door closer (if equipped)

If a door is left slightly open, it will close automatically.

## Power Windows



### 1 Power window switches

To open: press the switch.

To close: pull the switch up.


Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

### 2 Window lock switch

The window lock switch disables the operation of all windows other than the driver's door window.

## Moon Roof (If Equipped)

### Opening and closing

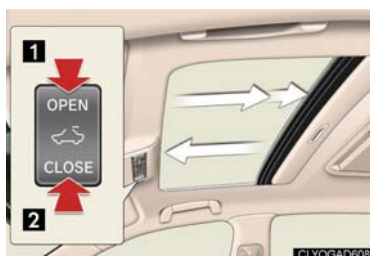

### 1 Opens

The moon roof stops slightly before the fully opened position.

To fully open, press the switch again.

### 2 Closes

### Tilt up and down



### 1 Tilts up

### 2 Tilts down

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

## Fuel Tank Cap



- 1 Press the fuel filler door opener.



- 2 Slowly remove the cap by turning it counter-clockwise.  
After the cap is removed, it can be hung on the inside of the fuel filler door.

## Hood



- 1 Pull the hood release lever.



- 2 Insert your fingers under the hood, pull the hood catch and lift the hood.

## Trunk

### ■ Opening the trunk



#### ► Trunk opener

To open the trunk from inside the cabin, simply press the trunk opener.



To disable the trunk opener, turn OFF the main switch in the glove box.

**1** ON

**2** OFF

When the trunk opener is disabled, the trunk cannot be opened using the wireless remote control or the entry function.

► Entry function and wireless remote control (→P.9, 10)

### ■ Trunk closer

If the trunk lid is left slightly open, it will close automatically.

### ■ Power trunk opener and closer (if equipped)



Pressing the switch closes the trunk lid automatically.